


**FLUKE**®

## 80 Series V Multimeter Quick Reference Guide

⚠ See Users Manual for "Safety Information" and complete operating information.


### Fuse Test

🎵 + LEAd = 🔌 OK

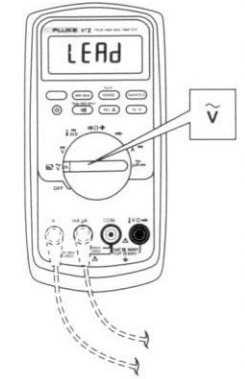


### Test Lead Alert


🎵 + LEAd = ❌

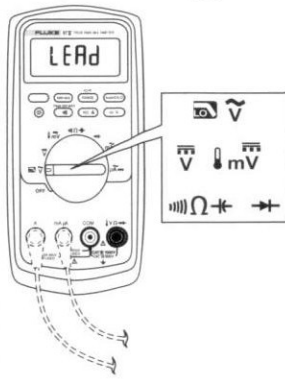


### Voltage

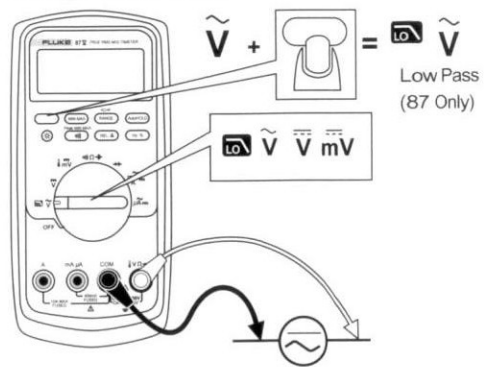


### Temperature (87 Only)

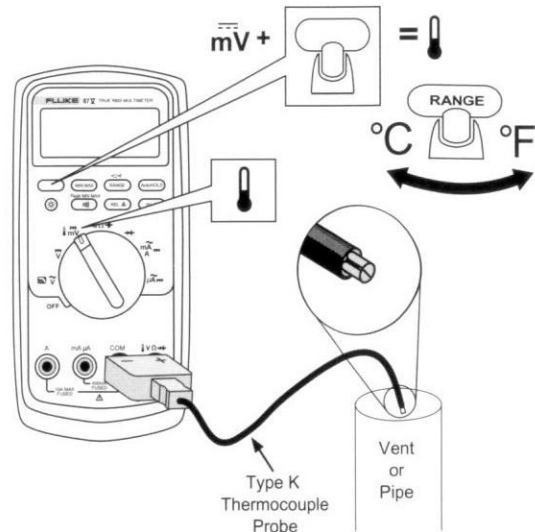


### Resistance

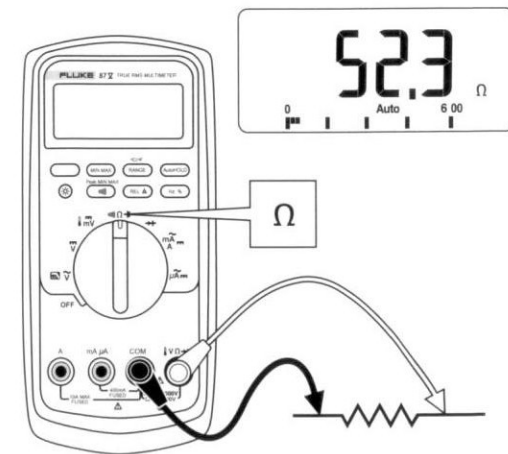


### Conductance nS

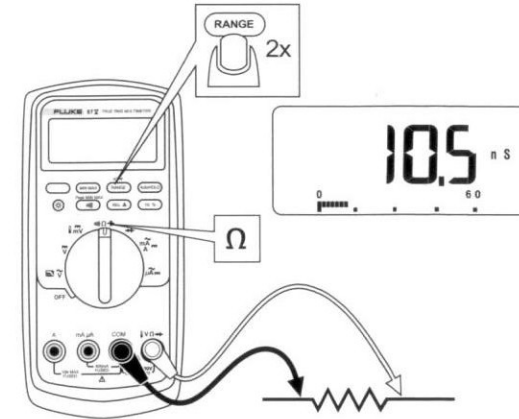


### Continuity

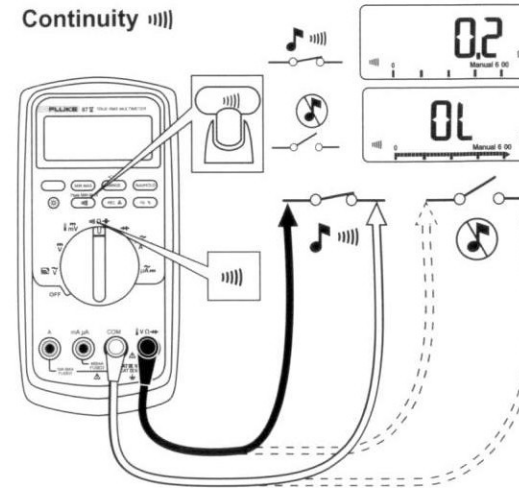


### Capacitance

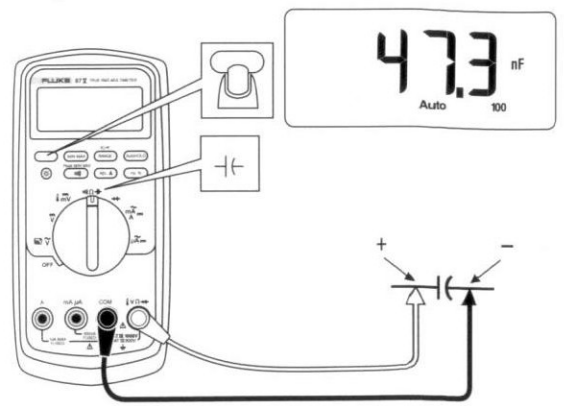


### Current

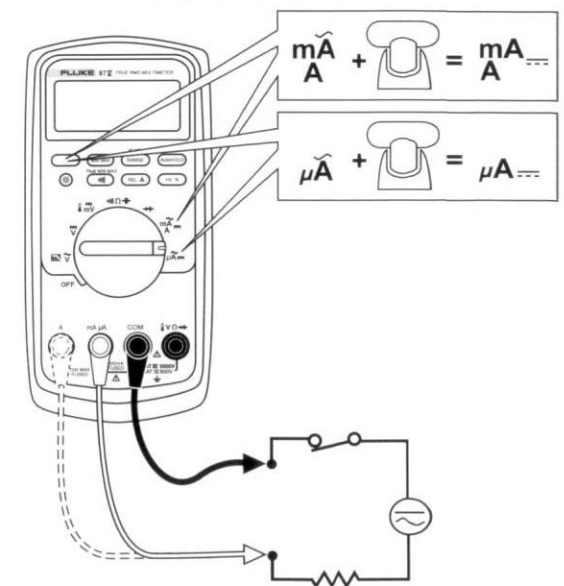


Diode Test →

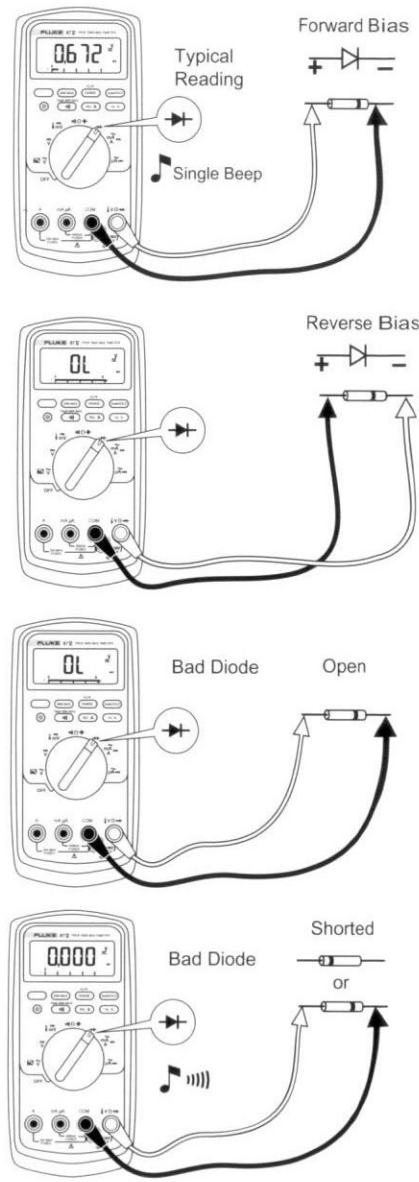


Frequency Hz

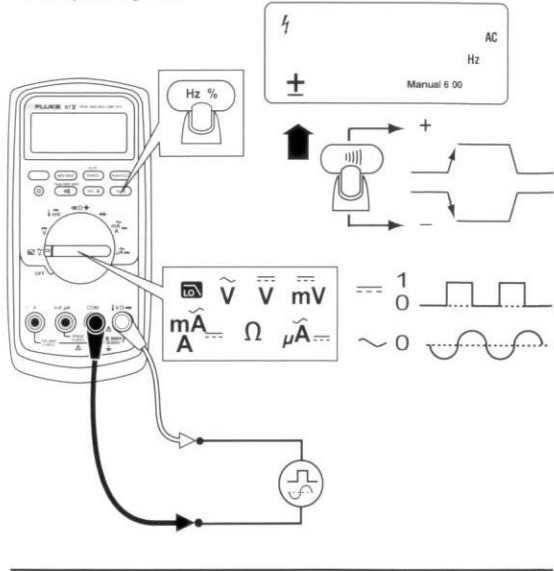


Duty Cycle %

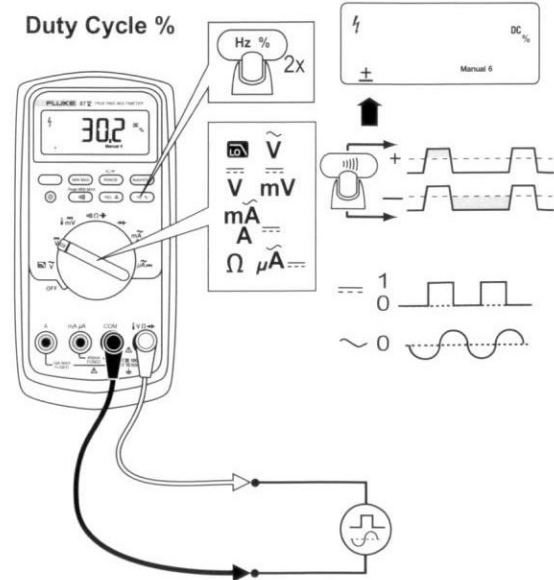


Min, Max, Average MIN MAX

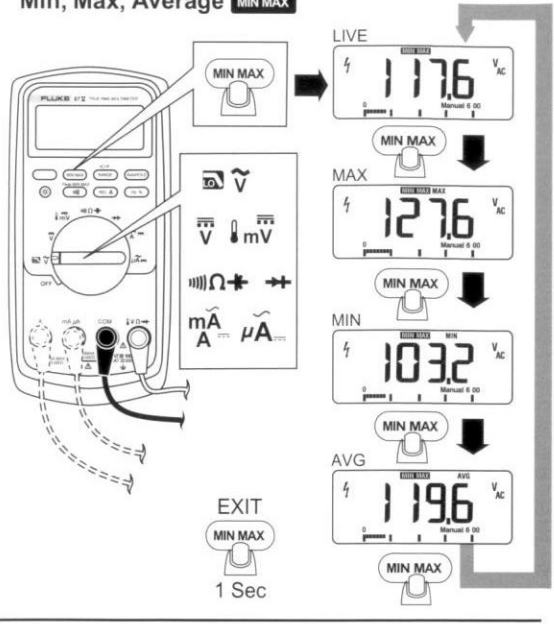


AutoHOLD 4-HOLD

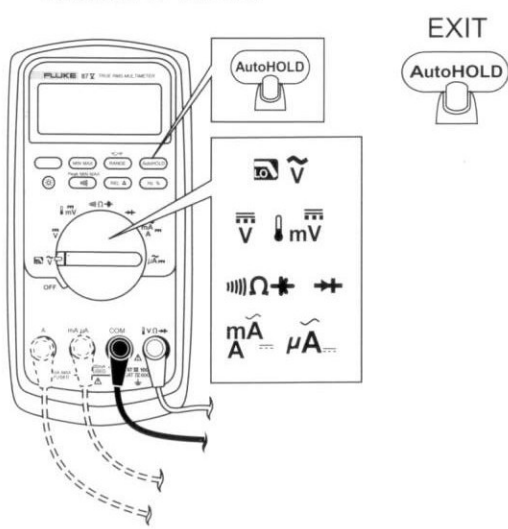

Relative Δ

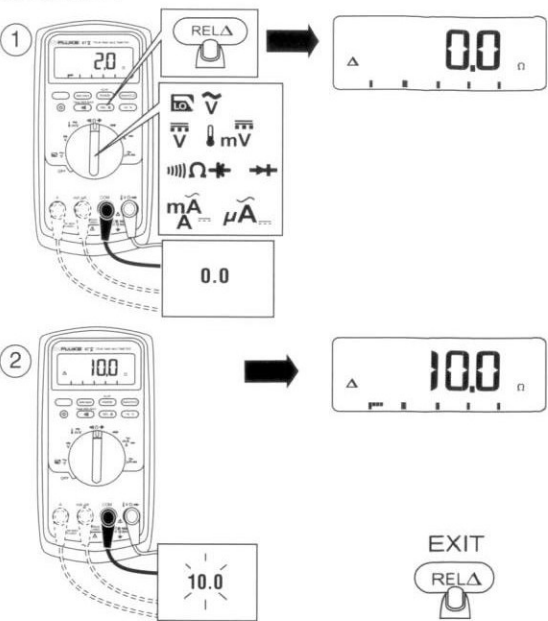

Hi Res Mode (87 Only)

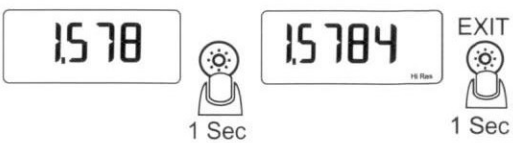

ToolPak

