

## SECTION 232300 - REFRIGERANT PIPING

## PART 1 - GENERAL

## 1.1 SUMMARY

## A. Section Includes:

1. Refrigerant pipes and fittings.

## 1.2 QUALITY ASSURANCE

- A. Comply with ASHRAE 15, "Safety Code for Refrigeration Systems."
- B. Comply with ASME B31.5, "Refrigeration Piping and Heat Transfer Components."

## PART 2 - PRODUCTS

## 2.1 COPPER TUBE AND FITTINGS

- A. Copper Tube: ASTM B 88, Type K or L or ASTM B 280, Type ACR.
- B. Wrought-Copper Fittings: ASME B16.22.
- C. Wrought-Copper Unions: ASME B16.22.
- D. Solder Filler Metals: ASTM B 32. Use 95-5 tin antimony or alloy HB solder to join copper socket fittings on copper pipe.
- E. Brazing Filler Metals: AWS A5.8/A5.8M.
- F. Flexible Connectors:
  1. Body: Tin-bronze bellows with woven, flexible, tinned-bronze-wire-reinforced protective jacket.
  2. End Connections: Socket ends.
  3. Offset Performance: Capable of minimum 3/4-inch misalignment in minimum 7-inch-long assembly.
  4. Working Pressure Rating: Factory test at minimum 500 psig.
  5. Maximum Operating Temperature: 250 deg F.

### PART 3 - EXECUTION

#### 3.1 PIPING APPLICATIONS FOR REFRIGERANT R-134a

- A. Suction Lines: Copper, Type ACR, annealed-temper tubing and wrought-copper fittings with brazed or soldered joints.
- B. Hot-Gas and Liquid Lines: Copper, Type ACR, Type K (A) Type L (B), annealed- or drawn-temper tubing and wrought-copper fittings with brazed or soldered joints.

#### 3.2 PIPING INSTALLATION

- A. Drawing plans, schematics, and diagrams indicate general location and arrangement of piping systems; indicated locations and arrangements were used to size pipe and calculate friction loss, expansion, pump sizing, and other design considerations. Install piping as indicated unless deviations to layout are approved on Shop Drawings.
- B. Install refrigerant piping according to ASHRAE 15.
- C. Install piping in concealed locations unless otherwise indicated and except in equipment rooms and service areas.
- D. Install piping indicated to be exposed and piping in equipment rooms and service areas at right angles or parallel to building walls. Diagonal runs are prohibited unless specifically indicated otherwise.
- E. Install piping above accessible ceilings to allow sufficient space for ceiling panel removal.
- F. Install piping adjacent to machines to allow service and maintenance.
- G. Install piping free of sags and bends.
- H. Install fittings for changes in direction and branch connections.
- I. Select system components with pressure rating equal to or greater than system operating pressure.
- J. Install piping as short and direct as possible, with a minimum number of joints, elbows, and fittings.
- K. Arrange piping to allow inspection and service of refrigeration equipment. Install valves and specialties in accessible locations to allow for service and inspection. Install access doors or panels if valves or equipment requiring maintenance is concealed behind finished surfaces.
- L. Install refrigerant piping in protective conduit where installed belowground.
- M. Install refrigerant piping in rigid or flexible conduit in locations where exposed to mechanical injury.
- N. Slope refrigerant piping as follows:

1. Install horizontal hot-gas discharge piping with a uniform slope downward away from compressor.
  2. Install horizontal suction lines with a uniform slope downward to compressor.
  3. Install traps and double risers to entrain oil in vertical runs.
  4. Liquid lines may be installed level.
- O. When brazing or soldering, remove solenoid-valve coils and sight glasses; also remove valve stems, seats, and packing, and accessible internal parts of refrigerant specialties. Do not apply heat near expansion-valve bulb.
- P. Install piping with adequate clearance between pipe and adjacent walls and hangers or between pipes for insulation installation.
- Q. Identify refrigerant piping and valves according to Section 230553 "Identification for HVAC Piping and Equipment."
- R. Install sleeves for piping penetrations of walls, ceilings, and floors. Comply with requirements for sleeves specified in Section 230517 "Sleeves and Sleeve Seals for HVAC Piping."
- S. Install sleeve seals for piping penetrations of concrete walls and slabs. Comply with requirements for sleeve seals specified in Section 230517 "Sleeves and Sleeve Seals for HVAC Piping."
- T. Install escutcheons for piping penetrations of walls, ceilings, and floors.

### 3.3 PIPE JOINT CONSTRUCTION

- A. Ream ends of pipes and tubes and remove burrs.
- B. Remove scale, slag, dirt, and debris from inside and outside of pipe and fittings before assembly.
- C. Soldered Joints: Construct joints according to ASTM B 828 or CDA's "Copper Tube Handbook."
- D. Brazed Joints: Construct joints according to AWS's "Brazing Handbook," Chapter "Pipe and Tube."
1. Use Type BCuP (copper-phosphorus) alloy for joining copper socket fittings with copper pipe.
  2. Use Type BAg (cadmium-free silver) alloy for joining copper with bronze or steel.

### 3.4 HANGERS AND SUPPORTS

- A. Comply with requirements for pipe hangers and supports specified in Section 230529 "Hangers and Supports for HVAC Piping and Equipment."
- B. Install the following pipe attachments:
1. Adjustable steel clevis hangers for individual horizontal runs less than 20 feet long.

2. Roller hangers and spring hangers for individual horizontal runs 20 feet or longer.
  3. Spring hangers to support vertical runs.
  4. Copper-clad hangers and supports for hangers and supports in direct contact with copper pipe.
- C. Install hangers for copper tubing with the following maximum spacing and minimum rod diameters:
1. NPS 1/2: Maximum span, 60 inches; minimum rod, 1/4 inch.
  2. NPS 5/8: Maximum span, 60 inches; minimum rod, 1/4 inch.
  3. NPS 1: Maximum span, 72 inches; minimum rod, 1/4 inch.
  4. NPS 1-1/4: Maximum span, 96 inches; minimum rod, 3/8 inch.

### 3.5 FIELD QUALITY CONTROL

- A. Perform the following tests and inspections:
1. Comply with ASME B31.5, Chapter VI.
  2. Test refrigerant piping, specialties, and receivers. Isolate compressor, condenser, evaporator, and safety devices from test pressure if they are not rated above the test pressure.
- B. Prepare test and inspection reports.

### 3.6 SYSTEM CHARGING

- A. Charge system using the following procedures:
1. Install core in filter dryers after leak test but before evacuation.
  2. Evacuate entire refrigerant system with a vacuum pump to 500 micrometers (67 Pa). If vacuum holds for 12 hours, system is ready for charging.
  3. Break vacuum with refrigerant gas, allowing pressure to build up to 2 psig (14 kPa).
  4. Charge system with a new filter-dryer core in charging line.

### 3.7 ADJUSTING

- A. Adjust thermostatic expansion valve to obtain proper evaporator superheat.
- B. Adjust high- and low-pressure switch settings to avoid short cycling in response to fluctuating suction pressure.
- C. Adjust set-point temperature to the system design temperature.
- D. Perform the following adjustments before operating the refrigeration system, according to manufacturer's written instructions:
1. Verify that compressor oil level is correct.
  2. Open compressor suction and discharge valves.
  3. Open refrigerant valves except bypass valves that are used for other purposes.

4. Check open compressor-motor alignment and verify lubrication for motors and bearings.
- E. Replace core of replaceable filter dryer after system has been adjusted and after design flow rates and pressures are established.

END OF SECTION 232300